

# 737MAX APU关车

## 时间限制

编写人：刘治君

批准人：

Copyright Conserved by  
Training Management Department  
For Training Purpose Only  
教材仅供培训中使用！  
不得用作工作依据！



# 适用性说明

本教材适用于HNAT内部培训。



# 改版记录

| 版次 | 改版时间 | 改版原因 | 改版内容 | 改版人 |
|----|------|------|------|-----|
| R0 | /    | /    | /    | 刘治君 |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |
|    |      |      |      |     |

# C 目录

CONTENTS

**第一部分 737MAX APU关车程序**

---

**第二部分 737MAX/NG APU关车时间差异**

---



# 一、737MAX APU关车程序

- 1、卸载所有电气源负载；
- 2、确认BUS TRANS 电门在**AUTO**位；
- 3、将APU MASTER电门扳至**OFF**位；

NOTE：APU进气门和APU燃油关断活门完全关闭需120秒。

- 4、将1#油箱的燃油泵关闭；
- 5、APU MASTER电门扳至OFF位后至少等待120秒，再将电瓶电门扳至**OFF**位。

NOTE：APU MASTER电门放至OFF位后，APU会继续运转大约30秒，在APU冷却循环和没有完全停止前，禁止将电瓶电门扳至OFF位。



## 二、737MAX/NG APU关车时间差异

737MAX APU关车后冷却时间约30秒，至少120秒后可关闭电瓶。

(3) Set the APU master switch [16] to the OFF position.

**NOTE:** The air inlet door and the APU fuel shutoff valve can take up to 120 seconds to close.

SUBTASK 49-11-00-860-014

(4) Set the AFT or FWD No. 1 FUEL PUMP switch [17] to the OFF position.

SUBTASK 49-11-00-860-015

(5) After the APU has completely stopped, set the BAT switch [1] on the P5 forward overhead panel to the OFF position.

**NOTE:** After the APU master switch [16] is set to the OFF position, the APU continues to operate for approximately 30 seconds during its cool-down cycle. The BAT switch [1] must not be set to the OFF position until after the APU cool-down cycle and the APU engine stops its operations.

# 737MAX

737NG APU关车后冷却时间约60秒，至少90秒后可关闭电瓶。

(3) Set the APU master switch [16] to the OFF position.

**NOTE:** The APU continues to operate for approximately 60 seconds during its cool-down cycle. The air inlet door and the APU fuel shutoff valve must close in approximately 30 seconds.

SUBTASK 49-11-00-860-031

(4) Set the No. 1 AFT FUEL PUMP switch [17] or No. 1 FWD FUEL PUMP switch [17] to the OFF position.

SUBTASK 49-11-00-860-075

(5) If it is not necessary to do other tasks, set the BAT switch [1] on the P5 forward overhead panel to the OFF position.

**NOTE:** After the APU master switch is set to the OFF position, the APU continues to operate for approximately 60 seconds during its cool-down cycle. The BAT switch must not be set to the OFF position until after the APU cool-down cycle and the APU engine stops its operations.

# 737NG



## 二、737MAX/NG APU关车时间差异

提示:

MAX断电不能凭经验听APU进气门关门声音和观察EGT指针抖动, 要严格依据手册计时后再关电瓶。



# 参考资料

AMM TASK 49-11-00-860-802



A light gray world map is centered in the background. Overlaid on the map are four red airplane icons and several red dashed lines that represent flight paths. The paths are curved and connect various parts of the world, including Africa, Australia, and Asia. The word "Thanks" is written in a large, bold, red font across the center of the map.

# Thanks