

## 737 NG/MAX Defuel Tube Cracks



## **System Description**

- Fuel is consumed from the center tank first as the center tank pumps override the main tank pumps due to the center tank pumps having higher pressure
- A crack in the defuel tube allows fuel, from the center tank, to leak into the right main tank
- When the engine gets fuel from the center tank, any fuel that leaks through the crack begins to overfill the right main tank

